

**TEMPORARY REVISION NO. 01**  
**To: Eclipse 550® POH and**  
**FAA-Approved Airplane Flight Manual**  
**ANTI-SKID BRAKING SYSTEM (ABS)**

---

This Temporary Revision affects the AFM Part Number 06-123841, Revision "Original Issue", dated June 02, 2014. Remove this TR when Revision 01 is inserted. Record this TR insertion (or removal) on the Log of Temporary Revisions.

**Insert this page behind LOTR-1.**

---

06-123841-TR01

Signature: *Ronald S. McElegy* Date: FEB 03 2015

*For* Steven L. Lardinois  
Manager, Systems and Flight Test Branch, ACE-117C  
Chicago Aircraft Certification Office, 2300 E. Devon Avenue  
Des Plaines, IL 60018


**THIS PAGE INTENTIONALLY LEFT BLANK**





**THIS PAGE INTENTIONALLY LEFT BLANK**

**THIS PAGE INTENTIONALLY LEFT BLANK**

**Landing Gear**

<b>ABS "INOP" Light Flashing or ON</b>	
	
INOP on or flashing indicated a fault in the ABS	
<b>If on ground</b>	
<b>INOP Lamp Flashing</b>	
1. ABS Switch .....	Press
2. ABS INOP Lamp .....	Confirm ON
<b>NOTE</b> ABS Functionality Unavailable.	
-- END --	
<b>INOP Lamp ON or Flashing with Brake Application</b>	
1. Maintain directional control using rudder and steering.	
2. Brakes .....	Release
3. ALL INTERRUPT .....	PRESS and HOLD
4. Reapply Brake .....	Stop Normally
<b>NOTE</b> ABS Functionality Unavailable.	
-- END --	
<b>If in flight</b>	
<b>ABS INOP Lamp ON or Flashing</b>	
1. Maintain aircraft control, consider go around.	
2. Brakes .....	Check Brake Pressure
<b>If no brake pressure is felt or ABS activates:</b>	
1. ABS (ECB Page - FLCS) .....	Pull
2. L BRAKE CTRL (ECB Page - FLCS) .....	Pull
3. R BRAKE CTRL (ECB Page - FLCS) .....	Pull
4. Brakes ( <i>Pump Brakes as required</i> ) ....	Check Brake Pressure
5. Landing .....	Stop Normally
<b>NOTE</b> ABS Functionality Unavailable.	

Both ABS "ARMED" and "INOP" Lamps ON	
	
Both ABS lamps ON indicates a fault and ABS may not be available.	
1.	ABS (ECB Page - FLCS).....Pull
2.	L BRAKE CTRL (ECB Page - FLCS) .....Pull
3.	R BRAKE CTRL (ECB Page - FLCS).....Pull
4.	After ~30 Seconds ..... Verify Dark
5.	Brakes ( <i>Pump Brakes as required</i> ) .....Check Brake Pressure
6.	Land..... Stop Normally
<p><b>NOTE</b> ABS Functionality Unavailable.</p>	

ABS "ARMED" Lamp not ON with Gear Down (in air)	
	
Indicates a fault and ABS is not available.	
1.	ABS Switch ..... Press
<p><b>NOTE</b> ABS INOP Lamp may or may not illuminate in response to selection.</p>	
2.	Brakes .....Check Brake Pressure
<p><b>If no brake pressure is felt or ABS activates, pull circuit breakers for ABS system:</b></p>	
1.	ABS (ECB Page - FLCS).....Pull
2.	L BRAKE CTRL (ECB Page - FLCS) .....Pull
3.	R BRAKE CTRL (ECB Page - FLCS).....Pull
4.	Brakes ( <i>Pump Brakes as required</i> ) .....Check Brake Pressure
5.	Land..... Stop Normally
<p><b>NOTE</b> ABS Functionality Unavailable</p>	

**THIS PAGE INTENTIONALLY LEFT BLANK**